

Network Video Recorder

NR-1604

User's Manual

Quality Service Group

A decorative geometric pattern in the bottom left corner, consisting of several light grey squares and rectangles arranged in a grid-like fashion, with some squares missing or offset.

Product name:	Network Video Recorder (NR-1604)
Release Date:	2009/
Manual Revision:	V1.0
Web site:	www.brickcom.com
Email:	technical@brickcom.com info@brickcom.com
Made in Taiwan.	©2009 Brickcom Corporation. All Rights Reserved

Before You Use This Product

The use of surveillance devices may be prohibited by law in your country. The NR-1604 is not only a high-performance web-ready NVR but also can be part of a flexible surveillance system. It is the user's responsibility to ensure that the operation of such devices is legal before installing this unit for its intended use.

It is important to first verify that all contents received are complete according to the list in the "Package Contents" chapter. Take notice of the warnings in "Quick installation guide" before the Network Camera is installed, then carefully read and follow the instructions in the "Installation" chapter to avoid damages due to faulty assembly and installation.

Package Contents

- NR-1604 Network Video Recorder
- Power Cord
- Ethernet Cable
- Printed Quick Installation Guide
- Printed Warranty Card
- CD-ROM(Quick Installation Guide, User's Manual, Setup Wizard)

Network Video Recorder Overview

The Brickcom NR-1604 is an ARM9-based Stand-alone NVR (Network Video Recorder). Featured with embedded Linux operating system, which is designed for remote monitoring, live viewing, recording, and multi-channel playback of pictures from IP cameras inside a network surveillance system,

The Brickcom NR-1604 is equipped with a Gigabit Ethernet port and houses 2 SATA hard disks (Max Capacity: 2TB) for long-term recording. The support of external UPS systems ensures uninterrupted recording in case of power failure. The pictures from up to 16 network cameras can be recorded simultaneously over the network and be played back on a PC from a remote site. Support of Mega-pixel cameras and H.264 compression provides high-quality image recording and saves more bandwidth.

Using Microsoft Internet Explorer 6.0 or above in combination with a user-friendly interface makes local or remote management much easier and more convenient. No need to install other software on the PC.

A max of 4 PCs is allowed to access the device concurrently to perform the settings and operations. Moreover its ability to automatically search and find the available cameras on the network can greatly reduce the efforts when expanding the system, which enables more scalability. The above advantages make the NVR-1604 an economic solution for building a robust network surveillance system for SMB and SOHO users.

The NR-1604 is designed for use within a surveillance system, and performs recordings and playbacks pictures from network cameras in the system. It is a recording device using a hard disk drive to record camera pictures instead of using video tapes so that pictures recorded by repeated overwriting will not experience deterioration of the recorded picture quality. Up to 16 cameras can be connected via a network and it is possible to record their camera pictures. It is possible to perform the settings or operate the NVR using a web browser installed on a PC connected to a network, or remote controller. Recorded video can be played back from remote site by a PC. Up to 4 PCs (web browsers) can access this unit concurrently and it is possible to perform the settings and operate this unit. NR-1604, its ability to automatically search and find the available cameras on the network can greatly reduce the user effort when expanding the system.

System Requirements

The following are minimum system requirements for the system to operate NR-1604:

Operating System

Microsoft Windows 2000 Professional,

Windows XP Professional (32 bit)

Windows Server 2003 (32 bit)

Browser

Microsoft Internet Explorer 6 or above

CPU

Minimum Intel Pentium 4 2.4 GHz or higher (Dual Core is recommended)

RAM

Minimum 1 GB of RAM, 2GB or above is recommended

Network

Minimum 10/100 Ethernet (Gigabit Ethernet is recommended)

Graphics Adapter

AGP or PCI-Express, minimum 1024×768, 16 bit colors.

(We highly recommend to work above the 1024 x 768 resolution to get the full experience of the software)

- *Make sure your display DPI setting is set to default at 96DPI*
- *To set DPI value, right-click on desktop, choose "Settings" tab >> "Advanced" >> "General"*

CD-ROM Drive:

It is necessary to read the operating instructions in the provided CD-ROM.

Adobe Reader:

It is necessary to read the operating instructions in the provided CD-ROM.

- Audio function will not be working if a sound card is uninstalled on PC.
- Audio may be interrupted depending on the network environment.

Install Hard Disk

Start by removing the screws on the side




Push the top housing forward



Then lift it up



Remove the hard drive cover plate

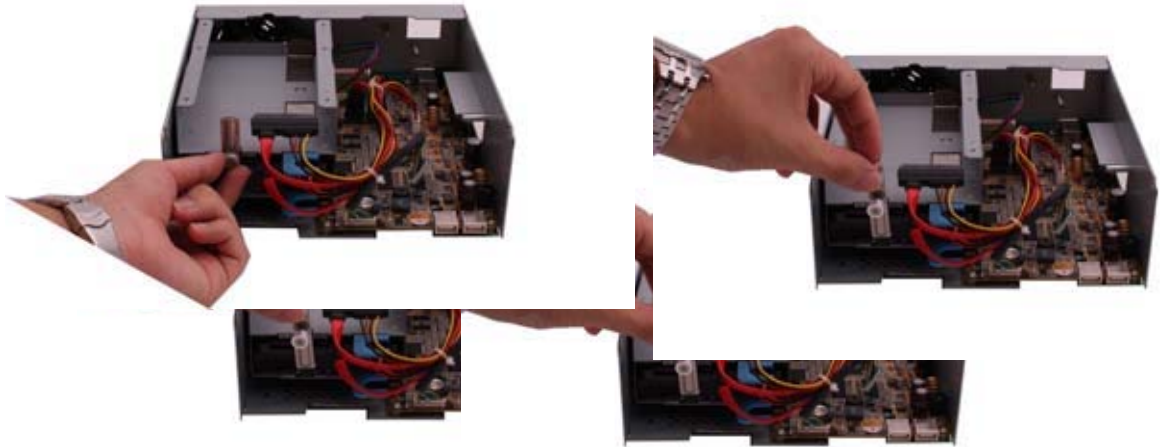

Pull out the hard drive tray holder



Place the hard drive on the tray and push it inward to secure the hard drive



Connect the SATA cable to the hard drive




Put the hard drive tray cover plate back



Place the top housing back and secure it with the bottom housing




Hardware Illustration (Front)

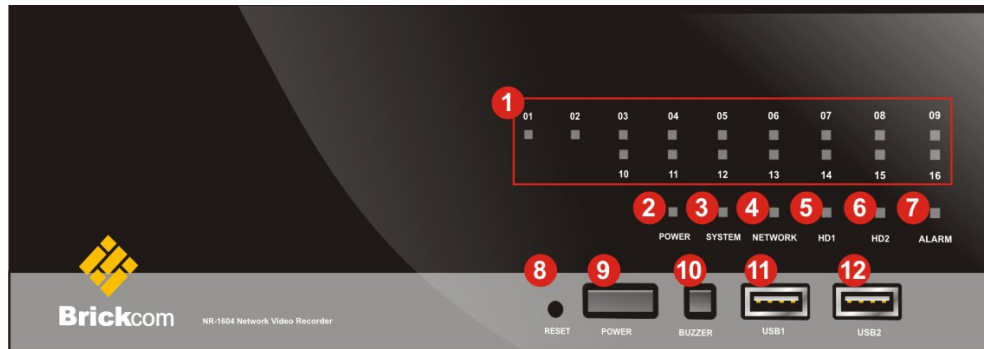

- ❶ LEDs for camera status
- ❷ Power LED
- ❸ System Status LED
- ❹ Network Status LED
- ❺ Hard Disk 1 Status LED
- ❻ Hard Disk 2 Status LED

- ❼ Alarm LED
- ❽ Reset Button
- ❾ Power Button
- ❿ Buzzer Stop Button
- ⓫ USB 1
- ⓬ USB 2

I/O Ports and RS-485 (Rear)

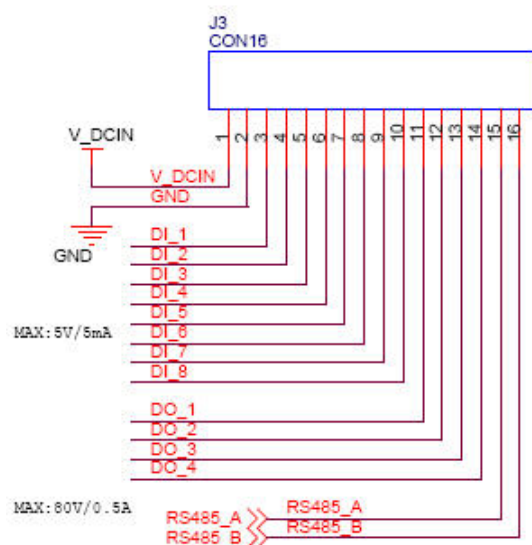

Pin	Signal
1	DCIN
2	GND
3~10	Alarm input
11	Out1
12	Out2
13	Out3
14	Out4
15	RS485+
16	RS485-

LEDs Definition

16 Channels

HDD x 2	Green	Solid green when the hard disk is mounted and being accessed
	Red	Solid red for disk fail
	Amber	Solid amber when disk is full Blinking when recycling
Network	Amber	Solid amber for activity on a 1G bps network.
	Green	Solid green for activity on a 10/100 Mbps network.
Status	Amber	Blinking during firmware upgrade
	Green	Shows solid green for normal operation. Blinking green when firmware upgrade is done
	Red	Flashes red for failed firmware upgrade.
Power	Green	Normal operation
	Red	System off (power adapter remains plugged in)
	Amber	Blinking amber indicating device is initializing
Alarm	Red	Blinking when an alarm occurs
	None	When alarm is reset

Camera LED	Green	Solid green, live connected with no event or recording activity
	Amber	Blinking amber, manual or event recording is being performed
	Amber	Solid amber, schedule or continuous recording is being performed
	Red	Recording is set but no video from camera


Connect to the NR-1604

There are various ways you can connect to the NR-1604 and below are the suggested methods for different network setup:

- The NR-1604 is placed in a network with a DHCP server: Connect to the NR-1604 by using **“Setup Wizard” Utility**.
- The NR-1604 is placed in a network without DHCP server (or you are connecting to it directly): **Access NR-1604 with its default IP.**

Use Setup Wizard Utility

If the NR-1604 is placed in a corporate network or a local area network where a DHCP server is already presented, install the “Setup Wizard” utility on the CD from a computer that is on the same network and locate the NR-1604 with its IP address that is assigned by the top-level DHCP server.

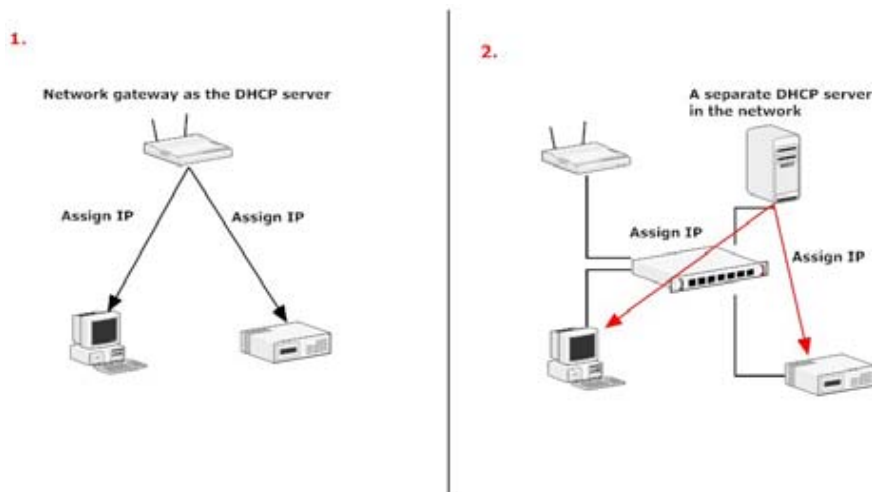


To begin, launch the “Setup Wizard” utility from the CD and proceed with the installation:



Once the installation is completed, check the “Launch the Search AP” option and click “Finish”:




The search should start automatically and its status should be displayed:



The NR-1604 should be located and its IP address should be displayed: Double click on it and the program should automatically access the NR-1604's web administration page from your default browser.



You may change NR-1604's IP address by click on the button highlighted below.

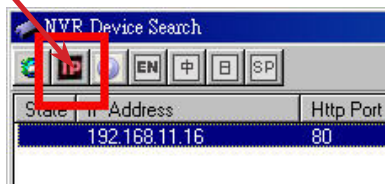

You will be prompted for the NR-1604's login information before proceeding to change device's IP address.



You may click on the button highlighted below to perform search again. Or double-click on any of the search results to access NR-1604's web administration page.



Perform search again


access NR-1604's web administration page

You should be prompted for the NR-1604's username and password. Enter its default username "**admin**" and password "**admin**" and then click "OK" to enter the system.




Access NR-1604 with its default IP address

The NR-1604 comes with a preconfigured static IP “**192.168.101.50**”. However, it is only used when there is no DHCP server presented in the network. The NR-1604 will turn on its DHCP server function and act as the DHCP server in the network. To connect to the NR-1604, use a PC that is on the same network over a switch or hub, or connect the PC directly to the NR-1604 using a crossover CAT5 Ethernet cable.

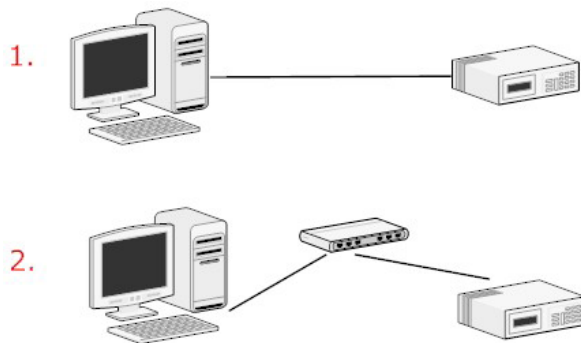

The PC that is connected directly to the NR-1604 (or within the same local area network) should receive an IP from it. Simply access the NR-1604 from your web browser with its IP address.

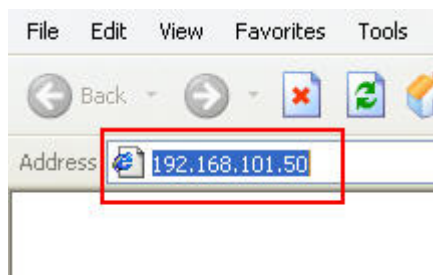


Again, you should be prompted for the username and password. Enter its default username “**admin**” and password “**admin**” and then click “OK” to enter the system.




Live View

NVR4Ch

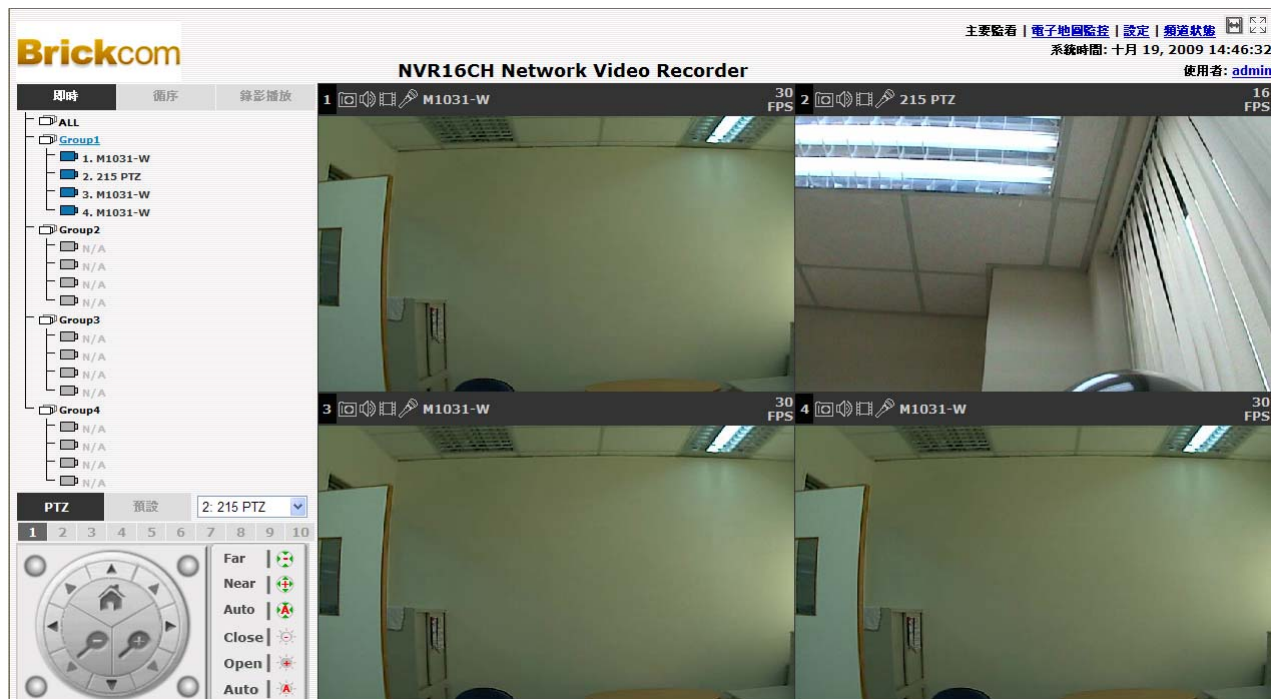

NVR16CH

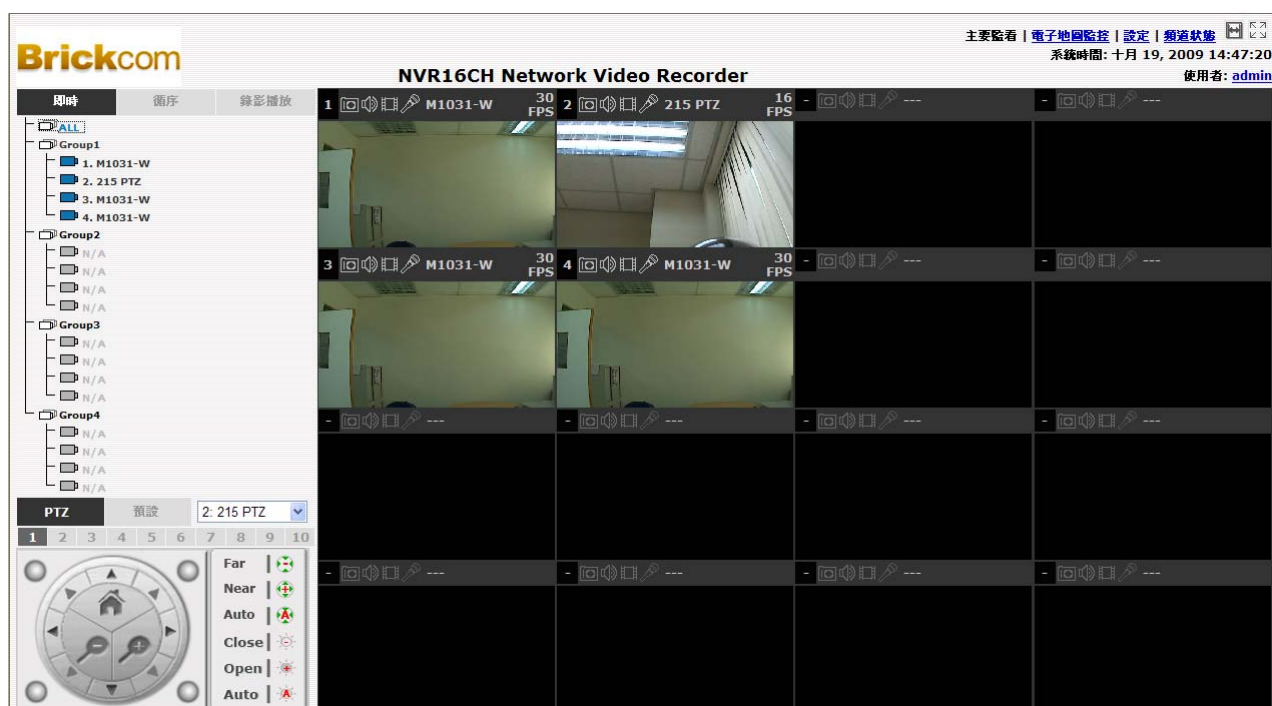


The “Live View” page provides the following functions:

- Retrieve camera’s video stream
- Retrieve camera’s status
- Perform Live Sequence Viewing
- PTZ Control
- Perform PTZ Preset Sequence viewing
- Perform manual recording
- Take snapshot
- Receive audio of a video stream
- Send audio
- Control “Buzzer”
- Change web UI display language

1.1 Retrieve camera's video stream

The camera list is expanded and displayed on the Live View page.

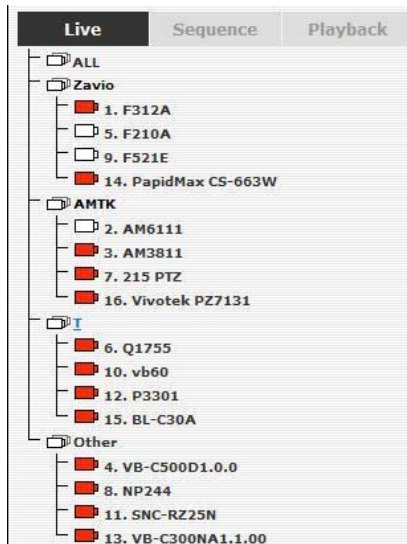

- Click "All" to display videos in the Quad-video mode (NVR4CH), 8-video mode (NVR8CH) or 16- video mode (NVR16CH)
- Click on a "Group" (ex. Group 1) to display videos from cameras under that group in quad view
- Click on any camera to display video in single-view mode

1.2 Retrieve camera's status

The camera list can show each camera's current status. Each status is represented with different colors and their meanings are explained in the following:

 Camera is connected

 Camera is NOT connected

 Camera is current performing recording

1.3 Perform Sequence Viewing

Sequence view is a function that allows you to view multiple video streams from certain cameras in sequence automatically without having to select them one by one.

To perform sequence view, select “SEQ View” from the upper-left hand corner.



Next, select one or more camera(s) or camera group(s) for sequence viewing.



Then select dwell interval from the drop-down menu.



Finally click “Start” to start sequence viewing

*Click “All Channels” to quickly select all available channels and start sequence view in single-view mode.

Click “All Groups” to quick select all available groups and start sequence view in quad-view mode

Or simply select the desired channels and press “Start” to start sequence view


The “All Group” button is not available in 4Ch NVR as it only has one group

1.4 PTZ Control

PTZ control provides functions to pan, tilt, and zoom a PTZ camera as well as the ability to adjust camera focus and iris



Camera(s) that are currently being selected for live viewing will be listed in the PTZ drop-down menu. Simply select a camera then use the PTZ control panel to control the camera.



The bar shown below allows you to control the pan/tilt speed



1.5 Perform PTZ Preset Viewing


There are three functions provided in the “Preset” section:

- Perform preset point viewing of a particular camera
- Auto pan a particular camera
- Perform preset point sequence viewing




Preset Point Viewing

Start by selecting a PTZ camera from the drop down list:




It's available PTZ preset points will be listed in the drop down list shown below:




Select a preset position from the drop-down list and click “Go to” to move the live view to that position.

Auto Pan Viewing

Start by selecting a PTZ camera from the drop down list:



Use the Auto Pan Control buttons to pan right, left and stop auto pan

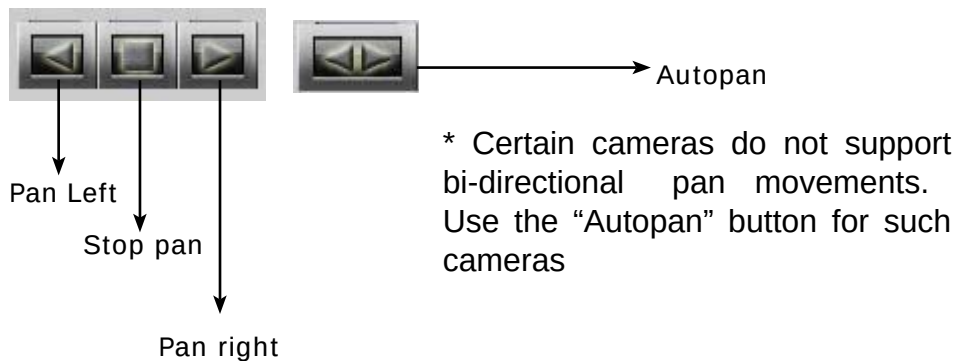


Preset Point Sequence Viewing

This function allows you to view multiple preset points videos of a camera without having to select them one by one. Once you have defined the preferred preset points in "**Camera Configurations**" >> "**PTZ Preset Sequence**" under the "**Setup**" menu, click "Start" here and the recorder will begin to display videos from those preset points in sequence automatically until you click "Stop"

1.6 Live Video Control Buttons

Each live video window comes with control buttons with functions described below:

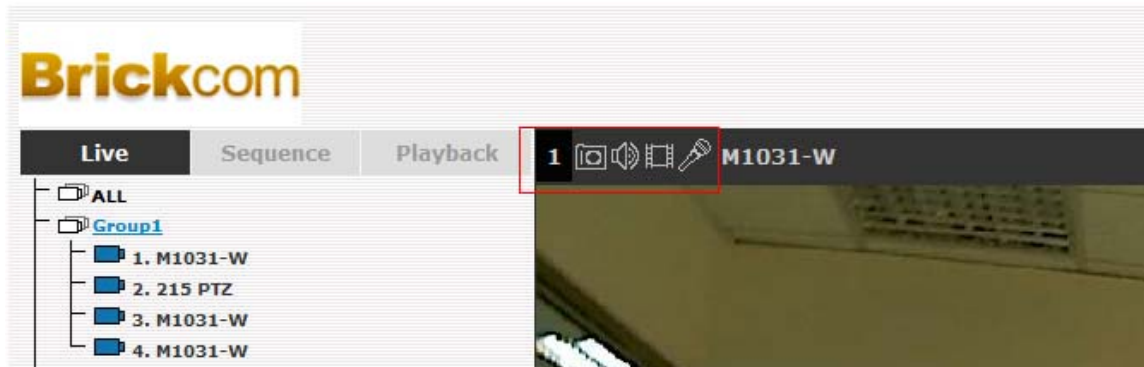

Take a snapshot of a live video

Turn on/off audio of a live video

Start/stop recording of a live video (manual recording)

Audio post function




Full screen view of a live video



Display video in its original ratio


Take a snapshot of a live video

To take a snapshot of a live video, click the [right-click](#) button and the snapshot of the video will be displayed in a pop up window shown like below

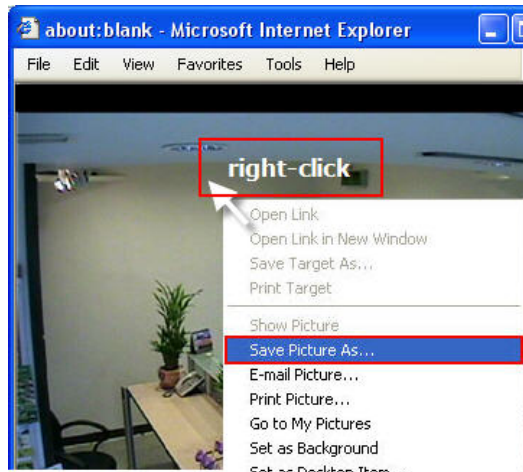

Right-click anywhere on the image and select "Save Image as" from the pull-down menu

In the pop up dialog, name the image file and choose which directory the image will be saved to and click "Save"

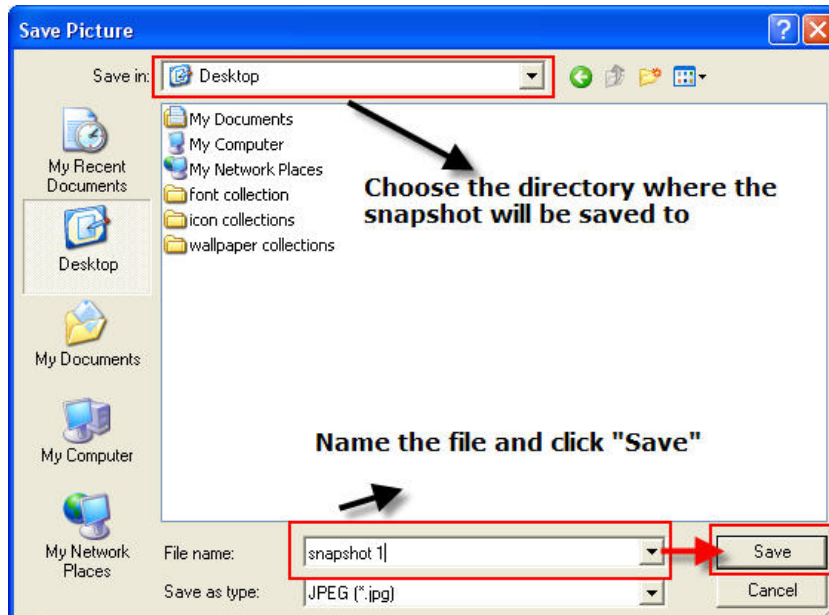

Full Screen View of a Live Video

To view a video in full screen, click the  button. To exit full screen video, double-click anywhere on the video.

Turn On/Off Audio of a Live Video

You can retrieve audio from a particular camera. Simply click the  button to do so.

The button will show in different color once the audio is turned on. Click on it again to turn off audio.

 *You may only turn on audio once channel at a time*

Start/Stop Recording of a Live Video

You can manually start or stop recording of a live video by using the  button.



The button will show in different color once the recording is started manually.  Click on it again to stop recording.

Audio post


This function allows user to speak from a PC through a microphone and the audio can be played at the camera side if it has a speaker connected to it.

1.7 Change Web UI Display Language

You can change the web UI display language from the current login username link located at the upper-right hand corner. Click on the link opens up a new window which displays detail information about the user as well as a drop-down menu which lets you change the display language.

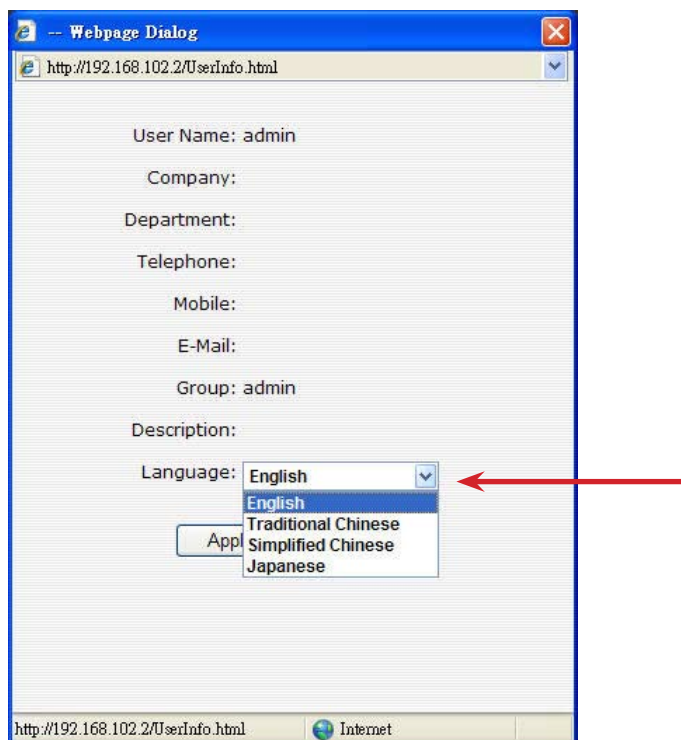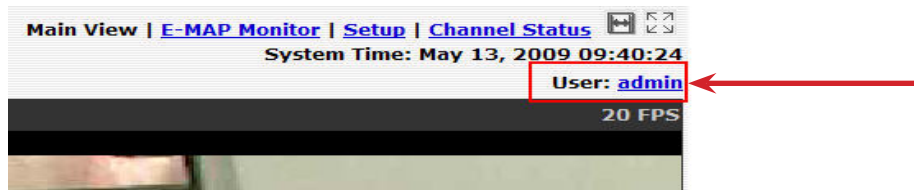

2. Playback

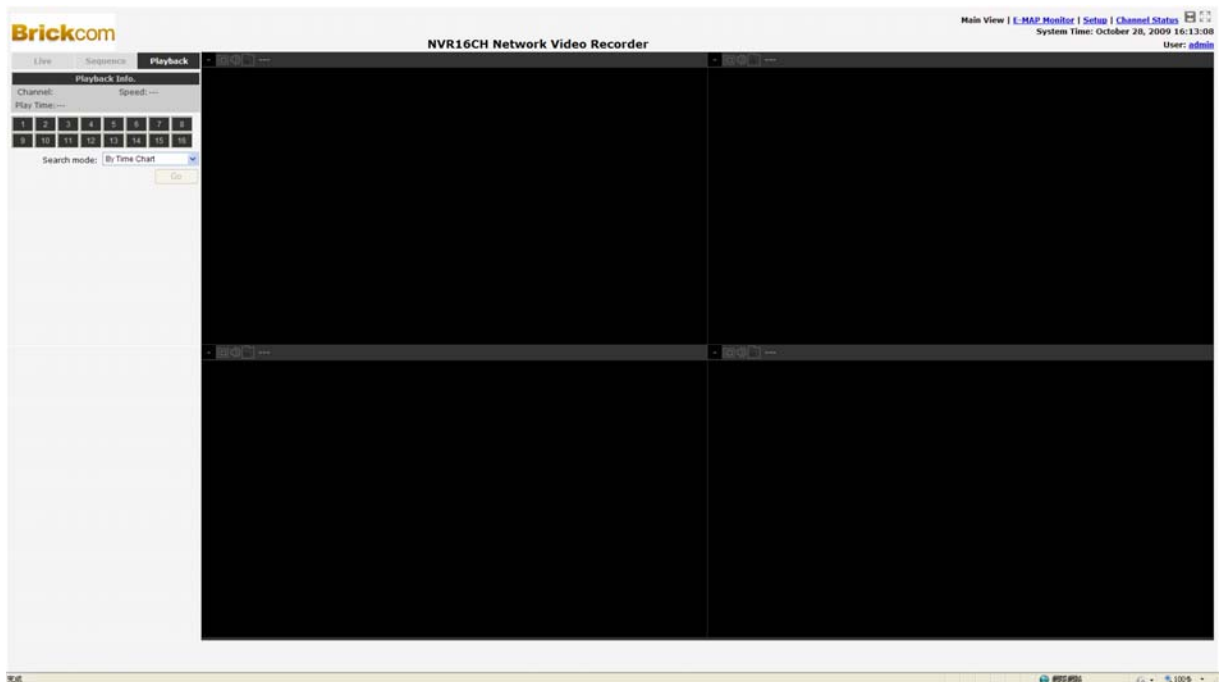

Playback is a function that allows you to play one or more videos that were previously recorded by a chosen recording method or due to an event trigger. The NR-1604 offers synchronized playback from up to 4 channels and various types of search methods are provided to help you find the footage you need quickly.

You can turn on or off the audio of a recorded video at your choice if audio was also recorded during the recording of the video.

Playback video can be viewed in full screen and snapshots can be taken and saved during a video playback.

2.1 Methods to Search Playback Videos

The NR-1604 offers three methods to quickly help users find videos that were previously recorded:

- Search by time: *Specify a time range and search videos recorded within that range*
- Search by event: Find videos that were recorded due to event triggers
- Play by start time: Enter a specific time a video was recorded to start playing back the video

Search by time chart

- Start by selecting which channel(s) you would like to perform a search on:

The screenshot shows the 'Playback Info.' window with three tabs: 'Live', 'Sequence', and 'Playback'. The 'Playback' tab is active. Below the tabs, there is a 'Channel:' field with '1' and '3' selected, a 'Speed: ---' field, and a 'Play Time: ---' field. Below these fields is a grid of 16 buttons numbered 1 to 16. Buttons 1 and 3 are highlighted in red. Below the grid is a 'Search mode:' dropdown menu set to 'By Time Chart' and a 'Go' button.

* Selected channels will be marked in red

This screenshot shows the 'Playback Info.' window with the 'Channel:' field displaying '4 6 13 14'. In the grid of 16 buttons, buttons 4, 6, 13, and 14 are highlighted in red. The 'Search mode:' dropdown is still set to 'By Time Chart'.

- Select "Search by time chart" from the "Search Method" drop down list and click "Go" to start the search:

This screenshot shows a close-up of the 'Search mode:' dropdown menu. The dropdown is open, showing 'By Time Chart' as the selected option. A 'Go' button is visible below the dropdown.

- Results will then be displayed in a “Date/Channel” table and boxes marked in blue represent videos found in those dates:

Date:	CH1	CH2	CH3	CH4	
					1
					2
					3
					4
					5
					6
					7
					8
					9
					10
					11
					12
					13
					14
					15
					16
					17
					18
					19
					20
					21
					22
					23
					24
					25
					26
					27
					28
					29
					30
					31

- Click on any blue cell box should direct you to the hour/channel table if there were multiple videos recorded during that date:

CH1	CH2	CH3	CH4	
				1
				2
				3
				4
				5
				6
				7
				8
				9
				10
				11
				12
				13
				14
				15
				16
				17
				18
				19
				20
				21
				22
				23
				24

* Videos from other cameras that are recorded on the same date will also be displayed

* Move the mouse cursor on a particular cell box without clicking gives you a preview of the play- back video n a small thumbnail


- Click on the cell box again will start playing back the videos if you have reached the end of search results:



- Videos found from other cameras that were recorded at the same time will also be played.

Search by event

- Start by selecting which channel(s) you would like to perform a search on:

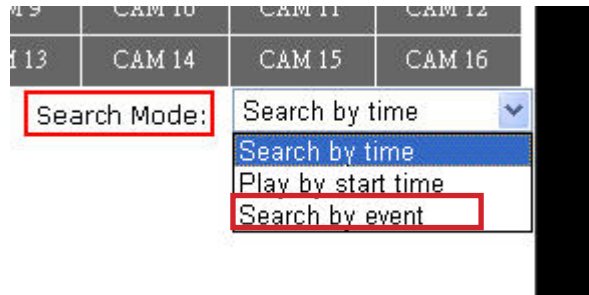

* Selected channels will be marked in red

1. 21	2. 21-MPE0	3. 20	4. 20-MPE0
5. 23	6. 23-MPE0	7. 24	8. 24-MPE0
9. Camera	10. Camera	11. 27	12. 27-H26
13. Camera	14. 26-MPE	15. 26-Axis	16. 26-Axis

- Select "Search by event" from the "Search Method" drop-down list and click "Go" to start the search:
- Results will then be listed like what is shown below (displays the oldest record top down). Click on a particular result to start the playback:



* You can click "Next Search" to display the next 15 results.

- You may also specify a new start time to search and display results from then on. You can restrict the number of results to be displayed at once (max. 30) and perform the search again



Play by specific time

If you know when a recording was taken place, you may choose the "Play by start time" from the "Search Method" drop-down list



Then you will be prompted to enter a specific time and date for the recorded video.



Use the  button to select month, date, and year

Search by event (Most Recent)


This function quickly displays the most recent event recordings from the selected channels, displaying the most recent result top down. You may click “Update” to update the list to display the most recent result



2.2 Export Playback Videos to AVI Files

User can export the recorded playback videos stored on the NR-1604 to a local computer and save them in AVI file format. The files can then be played on the PC by a 3rd party media player such as VLC player or Windows Media player.

Once you locate the recorded videos with steps described in the previous section, hit the “Export AVI” button on a video window of the video you wish to export.

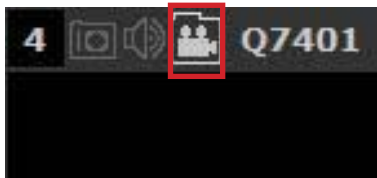


A new dialog will pop up and allows you to specify the time frame (or length) of the video you wish to export



Click the  button to pull down the calendar to help you specify the month, date and the year



Specify the starting and ending hours of the video by entering numbers in the text boxes

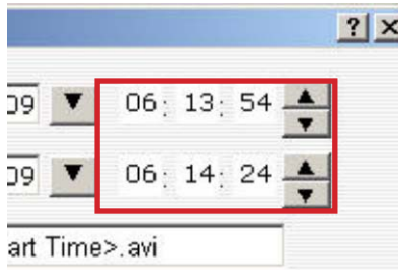

Hit the “Start” button to start exporting. The file will be automatically named and saved under the C:\ partition



You will be notified once the process is completed successfully



The exported AVI file will be saved under the C partition



* ffdshow is required in order to play the exported AVI file with Windows Media Player. You can get it at “<http://sourceforge.net/projects/ffdshow-tryout/>” to download the “ffdshow_beta6_rev2527_20081219.exe”

3. System Setup

3.1 System Configurations

The “System Configurations” page provides users options to setup the device quickly and properly. After properly configuring all settings in all the sub-pages, users should expect a fully working network video recorder that is ready to manage cameras on the network. We will start by configuring its network settings to make sure it works correctly in your network. Next, we will help you adjust the system time so videos will be recorder with correct timestamp. To better secure the system for unwanted disturbance, we will guide you on setting up user’s account and privileges to prevent settings gets altered by users other than the system administrator. Lastly, we will tell you what you should expect after installing a hard disk and how to prepare the hard disk for the video recording.

3.1.1 Network Settings

The screenshot shows the 'Setup' page for a Brickcom NVR16CH Network Video Recorder. On the left is a navigation menu with the following items: **Setup**, **System Configuration** (expanded), **Channel Configuration**, **Event Configuration**, **Recording Configuration**, and **System Options**. Under 'System Configuration', the sub-items are: Network Setup, Time and Date, Users Account, Group Privilege, and Disk Setup. The main content area is titled 'Network Setting' and contains the following fields and controls:

- Connection Type: DHCP (selected from a dropdown)
- IP Address: 10.5.42.113
- Subnet Mask: 255.255.255.0
- Gateway: 10.5.42.254
- DNS 1: 10.5.1.103
- DNS 2: 10.5.1.101
- HTTP Port: 80
- Streaming Port: 9877
- UPnP Port Forwarding: ☐ External Port: 6000 [Test] [Force Change]

Below the 'Network Setting' section is an 'Optional Setting' section with a 'Device Name' text input field and an 'Apply' button at the bottom.

You need to adjust settings in this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to obtain IP address from DHCP server, it should be sufficient in most network environments, and most likely you should not need to alter anything in this page. To locate the recorder, simply use the IP Utility with steps described in page 12.

If you wish to set the recorder to use a static IP address in your local area network,

1. Choose "Static IP" from the "Connection Type" drop-down menu
2. Enter the IP address, subnet mask, default gateway address and DNS server address for the recorder
3. Enable "DHCP Server" under "DHCP Server" if you wish to use the recorder as a DHCP server, or leave it disabled if there is already a DHCP server in the network
4. Click Apply for the settings to take effect

Network Setting

Connection Type: **Static IP**

IP Address: 192 . 168 . 101 . 143
Subnet Mask: 255 . 255 . 252 . 0
Gateway: 192 . 168 . 101 . 1
DNS1: 192 . 168 . 11 . 11
DNS2: 192 . 168 . 11 . 13

HTTP Port: 80
Streaming Port: 9877

UPnP Port Forwarding: ☐ External Port: 8000

Optional Setting

Device Name: test

DHCP Server

DHCP Server: ☐ ON ☒ OFF

Current DHCP Clients

IP Address	Name (if any)	MAC Address	Time when IP obtained
------------	---------------	-------------	-----------------------

The recorder can detect the presence of a DHCP server upon startup. It sets itself to use static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network

You can manually turn off the DHCP server function if you wish to use a separate DHCP server

Change the recorder's IP address would require the recorder to restart. Restart the device under "system Options" >> "Maintenance" for the settings to take effect.

3.1.2 Time and Date

The screenshot shows a web interface for 'Time and Date Setting'. On the left is a 'Setup' sidebar with a tree view containing: System Configuration (expanded), Network Setup, Time and Date (selected), Users Account, Group Privilege, Disk Setup, Channel Configuration, Event Configuration, Recording Configuration, and System Options. The main panel is titled 'Time and Date Setting' and includes: a 'Time Zone' dropdown menu set to 'GMT+08 (Beijing, Hong Kong, Shanghai, Taipei)' with a 'Summer time' checkbox; a 'Manual' section with radio button selection and dropdowns for Year (2009), Month (05), date (16), Hour (10), Minute (24), and Second (29); a 'Sync with NTP Server' section with a radio button selection, an 'NTP Server' text field containing 'ntp.ucad.edu', and an 'Update Interval' dropdown set to '24 hr'; and a 'Sync with PC' section with a radio button selection and a timestamp 'May 06, 2009 10:24:29'. An 'Apply' button is at the bottom right.

Set the time and date by selecting the time zone according to your location. It is imperative that you set the recorder's time correctly to avoid the following errors:

- Incorrect display time for playback videos
- Inconsistent display time of event logs and when they actually occur

After selecting the time zone, choose an option below to set the recorder time

- **Manual** – Use the drop down list and configure the time manually
- **Sync with NTP server** – enter the hostname or IP address of a valid NTP server and set how often the recorder should synchronize the time with the recorder by using the "Update interval" drop-down menu
- **Sync with PC** – Check this option to synchronize the recorder time with the PC that you are currently using to access the recorder

3.1.3 User Account

The recorder can be accessed by multiple users simultaneously. You can add, remove, and edit users by using options provided in this page to keep user information organized. Each recorder comes with a built-in “admin” account with password “admin”. It’s highly recommended to change the password upon your initial login.

To change the password of the “admin” account:

1. Click and highlight the “admin” account in the account list and click “Edit”
2. Its information should be displayed in “User Account Information”
3. Enter a new password in the “Password” field and enter it again in “Confirm Password”

To add a new user:

- Enter a username and password in “User Account Information”. All other fields are optional for your own reference.
- Select a group from the “Group” drop-down menu to assign the new user to a particular group
- Enter a short description for the account if you wish
- Click “Apply” to finish configuration

3.1.4 Group Privilege

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.

The recorder comes with seven built-in groups and five built-in privilege profiles, except the “admin” and the “guest” accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the “admin” account if you wish to do so. The guest account comes with a “view-only” privilege in the “Live View” page, and users in this group do not have the power to make any changes in the “Live View” page or have access to pages other than the “Live View” page.

To create a group, select a group from the “Group” drop-down

You can change the group name by clicking the “Change Group Name” button. A text box will be displayed for you to enter the new group

Choose what type of privilege you would like this group to have from the “Privilege Type” drop-down menu

Group:
Privilege Type:

Its access privilege will then be displayed. You can alter its settings by allowing or denying access to other cameras using the checkboxes instead of accepting the defaults

Group Privilege Setting

Group:

Account Type:

Live:

☐ CH1	☒ CH2	☒ CH3	☒ CH4	☒ CH5	☒ CH6	☒ CH7	☒ CH8
☒ CH9	☒ CH10	☒ CH11	☒ CH12	☒ CH13	☒ CH14	☒ CH15	☐ CH16

Playback:

☐ CH1	☒ CH2	☒ CH3	☒ CH4	☒ CH5	☒ CH6	☒ CH7	☒ CH8
☒ CH9	☒ CH10	☒ CH11	☒ CH12	☒ CH13	☒ CH14	☒ CH15	☐ CH16

Allow use of PTZ:

☐ CH1	☒ CH2	☒ CH3	☒ CH4	☒ CH5	☒ CH6	☒ CH7	☒ CH8
☒ CH9	☒ CH10	☒ CH11	☒ CH12	☒ CH13	☒ CH14	☒ CH15	☐ CH16

System Configuration:

☒ System Configuration	☒ Channel Configuration	☐ Event Configuration
--	---	--

3.1.5 Disk Setup

Once you install a hard disk to the recorder, you would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed in this page

To initialize it, simply click the “Format” button

Setup

- System Configuration
 - Network Setup
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup**
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Hard Disk Setting

Disk ID	Disk Type	Capacity	Disk Status	Format
1	Internal	445GB	Online	Format
2	Internal	142GB	Online	Format

[Enable RAID 1](#)

You can also connect external USB thumb drive to the recorder for firmware upgrade.

- || For instructions to install a hard disk to the recorder, refer to page 9
- || To obtain detail information about the disk, go to “System Options” >> “Disk Status”

3.2 Channel Configurations

3.2.1 Add a Camera

The NR-1604 provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually.

Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
 - PTZ Setting
 - E-Map Setting
- Event Configuration
- Recording Configuration
- System Options

Channel Setting

Channel	Channel Name	Group	IP Address	Format	Resolution
1	M1031-W	Group1	10.5.42.35	MJPEG	640x480
2	215 PTZ	Group1	10.5.42.112	MPEG4	4CIF
3	M1031-W	Group1	10.5.42.35	MJPEG	640x480
4	M1031-W	Group1	10.5.42.35	MJPEG	640x480

[Remove](#) [Edit](#)

Click here to search camera: [Search](#)

* You may skip this step and add a new camera manually by entering camera's setting in the "Camera Information" section

Add New Channel:

Channel ID:

Channel Name:

Group: [Change Group Name](#)

IP Address:

User Name:

Password:

HTTP Port:

[Detect](#) Once you fill out above information, click "Detect" to retrieve camera setting


[Add](#) [Cancel](#)

Automatic Search:

1. Click the "Search" button to perform the camera search. You should be prompted to install Active Control component in order for the search to function properly. Go ahead and click "Install"



2. After that, the search should begin and its status should be displayed:



3. Found cameras should be listed and simply select a camera from the list and press "Configure"



4. Its corresponding information should be displayed in the "Camera Information" section. Enter its username and password and select the channel ID and name the camera.



5. Click on "Detect" to establish connection between the recorder and the camera. If connection establishes successfully, camera's detailed information should be polled and displayed as below



6. Adjust its video format, frame rate, resolution or bitrate...etc if you wish. You can also click on the "Preview" to preview the live video of the camera.

Click "Add" to finish adding the camera

If cameras are marked with "*" in the search result, it means those cameras are already configured and connected to NR-1604.

Re-Search

and a new camera by manually entering camera's setting in the "Camera Information" manually, then follow step 5 ~6 described above.

	IP Address	HTTP Port	Installed
	192.168.101.40	80	
	192.168.101.42	80	
	192.168.101.41	80	
	192.168.101.47	80	
	192.168.101.43	80	
	192.168.101.23	80	*
	192.168.101.46	80	

Add a camera manually

Simply follow the instruction described above but instead of using the "Search" function, enter the camera's IP address and credential in the "Camera Information" manually, then follow step 5 ~6 described above.

Add New Channel:

2.

Channel ID: 3

Channel Name: cam3

Group: Group1 [Change Group Name](#)

IP Address: 192.168.101.20

User Name: root

Password: ****

HTTP Port: 80

1.

Detect

Once you fill out above information, click "Detect" to retrieve camera setting

Enter manually

3.2.2 OSD Settings

The OSD (On Screen Display) allows users to add informational text message and embed it onto the video. By default, this function is turned off. To add texts to one or more videos,

1. Select a camera you would like to add text to and choose “Display OSD”




OSD Settings

Camera: Camera 1

☐ Do Not Display OSD

☒ Display OSD

2. Choose one or more display options if you would also like the recorder to automatically embed the system time or the frame rate for you. Or simply choose to display a custom message of your own

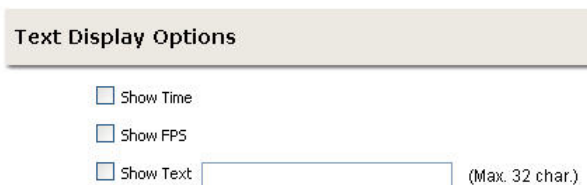


Text Display Options

☐ Show Time

☐ Show FPS

☒ Show Text (Max. 32 char.)

3. Next, define where the text will be displayed by either entering an X/Y coordinate or use the system predefined position from the drop-down menu

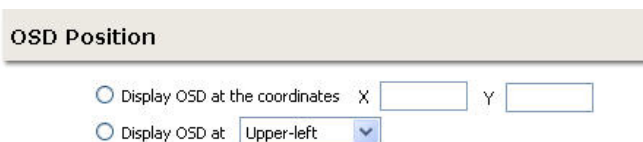

OSD Position


☐ Display OSD at the coordinates X Y

☒ Display OSD at Upper-left

4. Click on the “Preview” button to see the preview of your setting and click “Apply” to save the configuration



- The texts can be further adjusted with changes to different size, color or font so they can be more visible on the video

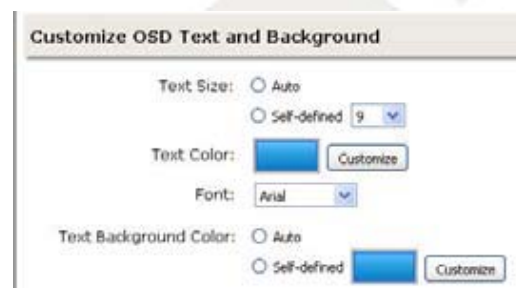

Customize OSD Text and Background

Text Size: ☐ Auto ☐ Self-defined 9


Text Color: Customize

Font: Arial


Text Background Color: ☐ Auto ☐ Self-defined Customize

3.2.3 PTZ Preset Settings


The recorder supports PTZ cameras and can set multiple preset points or retrieve and manage preset points that are set in the camera. This is helpful if you need to monitor multiple spots in one area from a particular camera.

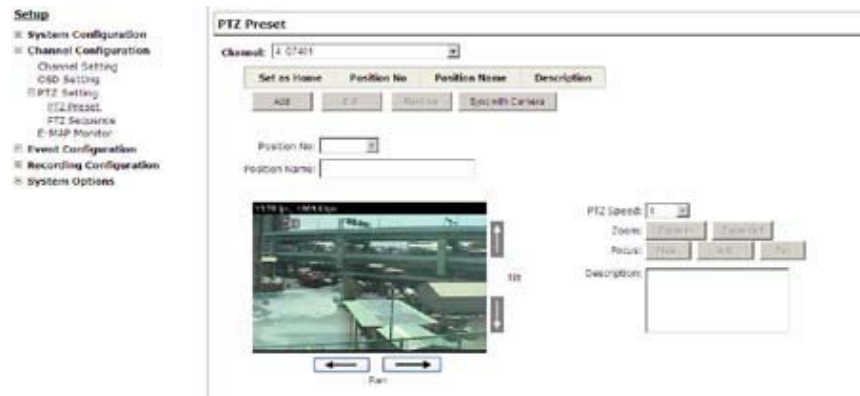

1. To set up PTZ preset points, select a camera from the “Camera” drop-down menu and click “Add”

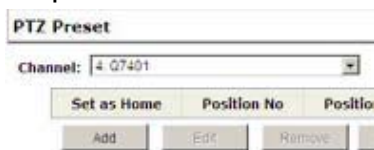

2. Select a position number for the preset point from the “Position Number” drop-down menu and fill in a name in the “Position Name” field for easier identification

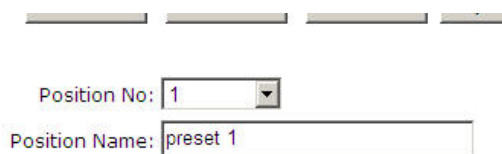

3. Use the PTZ control provided in the configuration page to set the preset point and set the position as the “HOME” position if you wish.
4. Click “Apply” to save the configuration.

3.2.4 PTZ Preset Sequence

Once you have multiple preset points defined for a camera, it is convenient for monitoring to set up the sequencing viewing among those preset point and let the recorder automatically switch between them for you.

The screenshot shows the 'PTZ Sequence' configuration page in the Brickcom NVR16CH Network Video Recorder interface. On the left is a 'Setup' sidebar with a tree view containing: System Configuration, Channel Configuration (with sub-items: Channel Setting, OSD Setting, PTZ Setting, PTZ Preset, PTZ Sequence, and E-Map Setting), Event Configuration, Recording Configuration, and System Options. The 'PTZ Sequence' option is selected. The main content area is titled 'PTZ Sequence' and includes a 'Channel:' dropdown menu. Below this are two large empty rectangular boxes labeled 'Preset Positions:' and 'Preset Sequence:'. At the bottom left of the main area is a 'Dwell Time:' dropdown menu. At the bottom right are 'Apply' and 'Cancel' buttons.

To configure preset sequence for a camera,” select a camera from the “Camera” drop-down menu

The available preset points should be listed in “Camera Presets” section

Pick the ones you like for sequence viewing and press the “->” button to move them to the “Adjust Position” section, then use the up and down buttons to adjust their sequences

Finally, select a dwell time from the drop-down menu and click “Apply” to save the configuration


- To start preset sequence viewing, check page 20 for instructions

3.2.5 E-Map Monitor

E-Map monitor is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an unusual event occurs.




To replace the map, click “Browse” button to locate the new map image file from the local PC and then click “Upload”

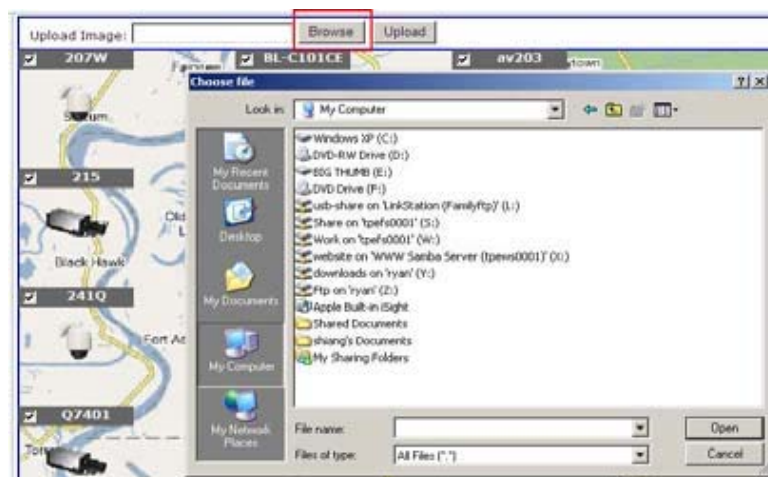

Then click and drag the camera icon to move the camera to define its location.



Access the E-Map Monitor page from the upper-right hand corner menu

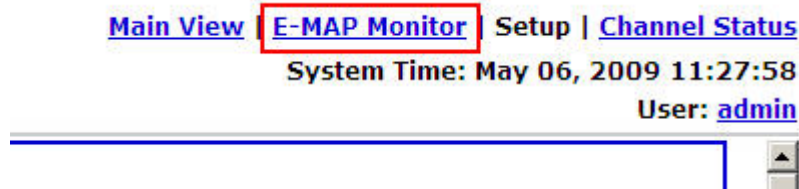

When the NR-1604 receives an event triggered from any of the cameras, their videos will be displayed on the E-Map and you can double-click on the video to enlarge it



3.3 Event Configurations

The “Event Configurations” section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it’s necessary.

3.3.1 General Settings

The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

Start the event configuration by defining the general settings:

Define when an event will be triggered

- Choose “Always” or “Only during...” under “Event Trigger Duration”
- For the “Only during...” option, choose the days by using the check box and then define the time range in those days in the “Start Time” and “End Time” fields that you would like the event trigger function to be enabled.

How often an event is triggered

- Set a time interval under “Event Trigger Interval” to define how often events are triggered

Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:

- You can choose to have the recorder send out the first few frames of the video recorder upon an event is triggered
- You can also choose to have the recorder send out a warning message in e-mail or in txt file format and upload it to a destined FTP server

3.3.2 I/O Settings

This function allows users to manage camera's digital input and output ports right from the recorder. You can setup the recorder to receive triggers from a particular camera's input port and trigger a device, such as an alarm that is connected to the recorder or camera's output port. Cameras that do not have built-in digital input/output port can also be configured to pair with the recorder's DI/DO ports.

Trigger event When				Trigger Output		
Camera	Port	Condition	Port	State	Duration	
SWL-210					0 sec (Threshold is 5-4000 sec)	
CH 1					0 sec (Threshold is 5-4000 sec)	
CH 2					0 sec (Threshold is 5-4000 sec)	
CH 3					0 sec (Threshold is 5-4000 sec)	
CH 4					0 sec (Threshold is 5-4000 sec)	
CH 5					0 sec (Threshold is 5-4000 sec)	

1. For cameras that come with physical digital input ports, their ports will be listed in the far left drop-down menu.
2. Pick the desired channel for I/O mapping, and then select the camera's input port from the drop-down menu.
3. Select the trigger condition from the "Condition" drop-down menu.
4. Select the recorder's input port if you would also like to use the recorder's input port for event trigger. And then select the trigger condition as well.
5. Next, select the recorder's output port and the trigger action
6. Finally, define the trigger duration.

|| The recorder does not control camera's input or output ports in a way to let you pair recorder itself with a camera's input or output port for event receiving or triggering.

|| The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.

|| Only connected cameras will be displayed in the list.

|| Some cameras only allow one trigger source be configured at a time, e.g.: if the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Configurations" >> "Event Trigger" setup page.

3.3.3 Event Servers

Event servers are to be used with event trigger actions. In case of unusual motion detected by the camera or a disk failure, the recorder can send notification with the acceptable format (image/txt) to a destined event server according to the configuration.

Configuring an FTP server

Setup

- System Configuration
- Channel Configuration
- Event Configuration
 - General Setting
 - I/O Setting
 - Event Servers
 - FTP Servers
 - HTTP Servers
 - SFTP Servers
 - Event Trigger
- Recording Configuration
- System Options

FTP Servers Setting

Name	Network Address	Port	Passive Mode	Enabled
192.198.11.11	192.198.11.11	21	No	☒
192.198.102.8	192.198.102.8	21	Yes	☒

FTP Server

Name:

Network Address: *Enter host name or IP address

Port:

Login Information:

User Name:

Password:

Passive Mode

☐ Use Passive Mode

Test

*Click "Test" to test the connection to the FTP server:

To add an FTP server,

1. Start by giving a name to the server that you are adding to the recorder
2. Enter the hostname or the IP address of the FTP server
3. Enter the communication port of the FTP server (usually port 21)

FTP Server

Name:

Network Address: * Enter host name or IP address

Port:

4. Enter the username and password of the FTP server if it's required
5. Check "Use Passive Mode" if it's required or leave it unchecked to use active mode

Login Information

Username:

Password:

Passive Mode

☐ Use Passive Mode

6. Click "Test" to verify if all information is entered correctly and the connection to the FTP server can be established successfully
7. Click "Apply" for the settings to take effect

Test

* Click "Test" to test the connection to the FTP server

|| If you wish to edit/remove/enable/disable an FTP server, click to highlight one from the profile list and choose the corresponding action button

Name	Network Address	Upload Path	Port	Passive Mode
FTP 1	192.168.101.100	event	21	No

Configuring an HTTP server

Setup

- ▣ System Configuration
- ▣ Channel Configuration
- ▣ Event Configuration
 - General Setting
 - I/O Setting
 - Event Servers
 - FTP Servers
 - HTTP Servers**
 - SMTP Servers
 - Event Trigger
- ▣ Recording Configuration
- ▣ System Options

HTTP Servers Setting

Server Name	HTTP Address	Port	Parameter	Enabled
-------------	--------------	------	-----------	---------

HTTP Server

Name:

Network Address: *Enter host name or IP address

Parameter:

Port:

User Name:

Password:

Test

*Click "Test" to test the connection to the HTTP server

1. Start by giving it a name as well
2. Enter the hostname or the IP address of the HTTP server
3. Enter the port that's used to communicate with the server
4. Enter the username and password if it's required
5. Click "Test" to verify if the information is entered correctly
6. Click "Apply" for the settings to take effect

Configuring an SMTP server

Setup

- System Configuration
- Channel Configuration
- Event Configuration
 - General Setting
 - I/O Setting
 - Event Servers
 - FTP Servers
 - HTTP Servers
 - SMTP Servers**
 - Event Trigger
- Recording Configuration
- System Options

SMTP Servers Setting

SMTP Server 1

Network Address: *Enter host name or IP address

Port:

Sender's Name:

Sender's E-mail:

☒ Enable Authentication:

User Name:

Password:

Test

Send Test Email To:

SMTP Server 2

Network Address: *Enter host name or IP address

Port:

Sender's Name:

Sender's E-mail:

☐ Enable Authentication:

User Name:

Password:

1. Enter the hostname or the IP address of the SMTP server
2. Enter the port of the SMTP server
3. Specify the sender's name in the "Sender's name" field
4. Enter the sender's e-mail address
5. Check "Enable Authentication" and enter the username and password of the SMTP server and it requires authentication
6. Click "Apply" to save the configuration

3.3.3 Event Triggers

We have finished defining how an event will be triggered and which servers will be receiving notifications in the previous two sections, now we can finish up the event configuration by setting:

- Which channels will have event trigger function enabled
- What is considered to be an event?
- Where the warnings will be sent to and how they will be sent

Event Handling Setting

When Channel is triggered by

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
Motion Detection	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐

When NVK is triggered by

☒ Encrypted ☐ When NVK Shutdown

☒ Disk Full ☒ When NVK System Configuration changed

☒ Disk Fail ☒ When Channel's Configuration Changed

☒ When NVK Start Up

Trigger Actions

☐ E-Mail: E-Mail Address: "use \\" to separate e-mails

☒ FTP: Upload Path:

☒ HTTP

☒ Trigger I/O Output

☐ Buzzer

Select Channels to Enable Event Trigger and which type of event should be triggered

- Use the checkbox to enable event trigger on the desired channels

Event Handling Settings

When Camera is Triggered by

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Input	☒	☐	☒	☐	☐	☐	☒	☐	☐	☒	☐	☐	☒	☐	☐	☐
Motion Detection	☒	☐	☒	☐	☐	☐	☒	☐	☐	☒	☐	☐	☒	☐	☐	☐

- Define which system events should trigger the recorder to send out notifications

When SVR-116 is Triggered by

- | | |
|---|---|
| ☐ Recycle | ☐ When SVR-116 Shuts down |
| ☐ Disk Full | ☐ When SVR-116 Configuration Changed |
| ☐ Disk Fail | ☐ Camera Configuration Changed |
| ☐ When SVR-116 Starts up | |

- Define how the notifications will be sent and where they will be sent to

Trigger Actions

☐	E-Mail:	E-Mail Addresses:	*use "," to separate e-mails
☐	FTP:	Upload Path:	
☐	HTTP:		
☐	Trigger Output:		
☐	Buzzer:		

** Event trigger may not work for cameras that are placed outside of your local network or on the Internet until the "UPnP Port Forwarding" is enabled in both the NVR and the router.*

3.4 Recording Configurations

The “recording configurations” gives users the overall control of how and when a recording is performed and the quality of different types of recordings performed on each channels. It can help the recorder to operate with sufficient system resource by performing recording only when it's necessary with adjustable recording frame rate.

3.4.1 General Settings

You can define the following in “General Settings”:

- Pre-Alarm/Post-Alarm recording length
- Recording frame rate
- Enable/disable different recording types on different cameras

Recording General Setting

Recording Buffer

Pre-alarm Buffer: sec

Post-alarm Buffer: sec

Recording Frame Rate

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Schedule	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Event	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full
Manual	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full	Full

Recording

☐ Enable Record

Camera Recording Setting

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
Schedule	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
Event	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
Manual	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐

The “recording configurations” gives users the overall control of how and when a recording is performed and the quality of different types of recordings performed on each channels. It can help the recorder to operate with sufficient system resource by performing recording only when it’s necessary with adjustable recording frame rate.

Recording Buffer

Pre-alarm Buffer: sec

Post-alarm Buffer: sec

Recording frame rate allows you to set different frame rate for different types of recording instead of recording at one frame rate only. Use the drop-down menu and select one of the pre-defined frame rates for a particular recording type

Recording Frame Rate																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	1	I Only	1	I Only	1											
Schedule	5	I Only	5	I Only	5											
Event	Full	Full	Full	Full	Full											
Manual	Full	Full	Full	Full	Full											

The section at the bottom allows you to turn on or off a particular recording type on any channels.

Camera Recording Setting																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	☐	☐	☐	☐	☐											
Schedule	☐	☐	☐	☐	☐											
Event	☐	☐	☐	☐	☐											

3.4.2 Schedule Recording

Here you can define the time range of the schedule recording for all channels.

To configure a schedule recording:

1. Use the "Camera" drop-down menu and select a camera first

Camera:

2. You can use the schedule table to set the time range. Click the cell boxes then move the cursor horizontally lets you set what hours to perform recording during a day. Click and move vertically lets you set what days to perform recording at a specific time.

* Each cell box represents 15 minutes of time. Click one or more boxes to omit consecutive recording

3. You can also use the “Quick Configuration” to define recording time range instead of clicking cell boxes one by one on the time table. Simply check what days you would like to perform recording and specify the recording duration by either choosing “All Day” or enter a start and end time for specific recording duration.

Quick Configuration

Days

☐ Mon. ☐ Tue. ☐ Wed. ☐ Thur. ☐ Fri. ☐ Sat. ☐ Sun.

Duration

☐ All day

☐ During Start Time: End Time:

4. Select the “Copy to” option if you would like to set the same recording schedule to another camera.

☒ During Start Time: : End Time:

Copy Schedule To Channel:

Apply

3.5 System Options

System Options gives users a glance of the overall system status and allows users to perform maintenance tasks such as upgrading firmware, restore/backup device settings or reboot device etc.

3.5.1 Device Information

The "Device Information" provides the general information of the device such as firmware version and system time. It also provides information of the current network settings and status.

Setup

- ▣ System Configuration
- ▣ Channel Configuration
- ▣ Event Configuration
- ▣ Recording Configuration
- ▣ System Options
 - Device Information
 - System Logs
 - Maintenance
 - DO Status
 - Disk Status
 - UPS Configuration

General Information

Device Name: tst
Model Name: SVR-116
Firmware Version: 1.2.0.30014714
Device Time: Up 0 days 16:56:55, since May 05 2009 18:56:23


Network Information

Network Type: DHCP
Device IP: 192.168.102.2
HTTP Port: 80
Streaming Port: 9877
MAC Address: 00:28:68:78:31:03
DHCP Server: Disabled
UPnP Port Forwarding: Disabled

Current DHCP Clients

3.5.2 Logs and Reports

“Logs and Reports” keeps a record of what’s been happening to the device and provides basic information for troubleshooting

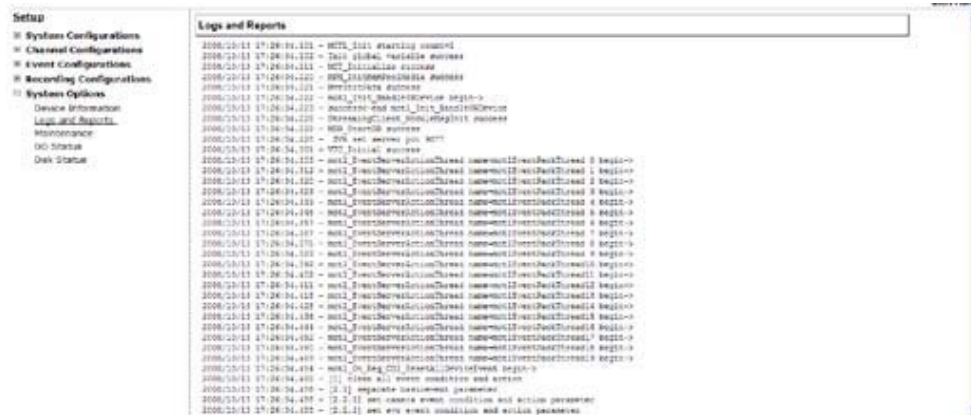

3.5.3 Maintenance

“Maintenance” provides functions for users to:

- Reboot the NR-1604 when necessary
- Reboot cameras directly from the NR-1604
- Perform Firmware Upgrade
- Backup the NR-1604’s settings to a local hard drive
- Restore the NR-1604’s settings from a previously saved configuration file
- Reset the NR-1604’s settings to their factory default values



Reboot the NR-1604

Reboot the NR-1604 after you upload a new firmware. You would need to manually reboot the system for the new firmware to take effect. Such process would prevent a recording from getting interrupted because the system would not automatically reboot itself after the new firmware is loaded onto the recorder.

Simply click “Restart” to begin the reboot process and confirm the action:



The restart process should be displayed and you should be prompted back to the “Maintenance” page after it is complete:



Reset the NR-1604 to Factory Default

To reset the recorder back to its factory default, click “Default” button and begin the process:



The process should be displayed and you should be prompted back to the “Maintenance” page after it is complete:



3.5.4 DO Status

This is where you can get the current status of the NR-1604 digital output ports. You can also change their status from this page.

NVR16CH Network Video Recorder

Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - DO Status**
 - Disk Status
 - UPS Configuration

DO Status

Port Number	Normal State (Click to change)	Current State (Click to change)
Output1	☒ Open ☐ Ground	☒ Open ☐ Ground
Output2	☒ Open ☐ Ground	☒ Open ☐ Ground
Output3	☒ Open ☐ Ground	☒ Open ☐ Ground
Output4	☒ Open ☐ Ground	☒ Open ☐ Ground

3.5.5 Disk Status

“Disk Status” gives you more detailed information of the hard drive that is currently installed in the NVR.

Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - DO Status
 - Disk Status**
 - UPS Configuration


Disk Status

Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	Recording Period	Est. Remaining Time
1	Online	300GB	33GB	11%	Sat 23:30:09 - Sat 04:30	Sat 06:00:00 - Sat 06:00:00	1 days 5 hours


3.5.6 UPS Configuration

Connect the UPS to the NR-1604's DI/DO port for sending and receiving signals between the UPS and the NR-1604. Refer to the diagram below to connect the UPS with its RS-232 interface to the NR-1604's DI/DO port.

The NR-1604 can receive signal from the UPS when there is a power failure and shut down itself automatically within a period of time.

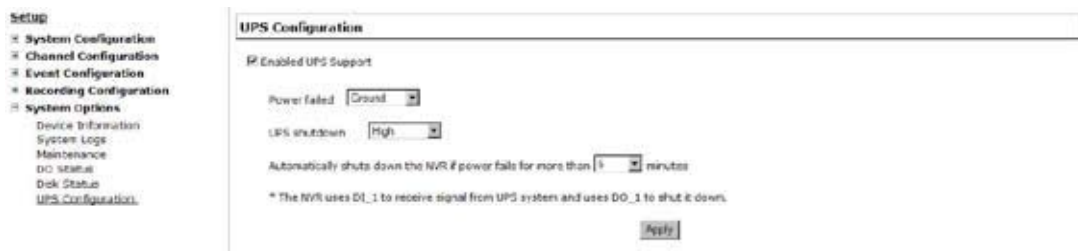

Connect UPS with its RS-232 interface to the NVR's IO port:

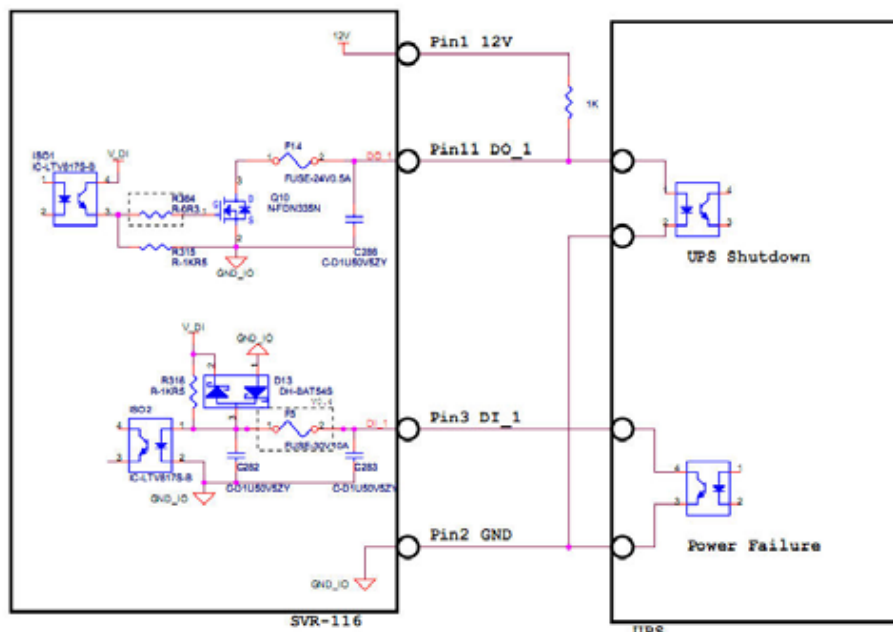

*** The NVR uses DI_1 to receive signal from UPS system and uses DO_1 to shut it down.**